

**Canon**

**SURE SHOT**

**76<sup>zoom</sup>**

**SURE SHOT**

**76<sup>zoom</sup>**  
*Date*

**PRIMA**  
ZOOM 76

**PRIMA**  
ZOOM 76

**DATE**

**E**

**F**

**G**

**I**

**S**

**P**



**E** Instructions

**G** Bedienungsanleitung

**S** Instrucciones

**F** Mode d'emploi

**I** Istruzioni

**P** Instruções

**Thank you for purchasing this Canon product.**

Before taking pictures, please read these instructions carefully for a thorough understanding of how the camera operates.

## Table of Contents

These instructions are divided into four sections: Introduction, Basic Operations, Advanced Operations, and Additional Information. When first using the camera, be sure to read the instructions from the Introduction.

### Convention

The following convention is used in these instructions:



Warnings you should observe when using the camera.



Additional information on using the camera.

(→ ■) is shorthand for "See page ■".

## 1

### Introduction

Handling Precautions .....	2
Table of Contents .....	4
Quick Reference .....	6
Nomenclature .....	8
Attaching and Using the Strap .....	11
Holding the Camera .....	12

## 2

### Basic Operations

1 Loading the Battery .....	13
2 Loading the Film .....	14
3 Turning the Power On .....	16
4 Checking the Battery Power .....	17
5 Using the Zoom .....	18
6 Shooting in Auto Mode .....	19
AiAF (Smart AF) Function .....	20
Close-up Photography .....	21
Green Indicator .....	22
7 Removing the Film .....	23

<b>3</b>	<b>Advanced Operations</b>	<b>E</b>
	Changing the Shooting Mode.....	24
	<b>AUTO</b> Auto Flash (No Red-eye Reduction) .....	25
	👁️ <b>AUTO</b> Auto Flash with Red-eye Reduction .....	26
	Red-eye Reduction Function .....	27
	⚡ Flash ON (Forced Flash) Mode ....	28
	🔇 Flash OFF (Suppressed Flash) Mode .....	29
	🕒 Using the Self-timer.....	30
	Slow-Synchro Function .....	31
	Using Focus Lock .....	32
	Imprinting the Date and Time <b>DATE</b> .....	33
	Setting the Date and Time <b>DATE</b> .....	34


<b>4</b>	<b>Additional Information</b>
	Troubleshooting .....
	Questions and Answers .....
	Specifications .....

Please note that these instructions are for both the model with the date function and model without date function. Information relevant only to the model with the date function is marked with the **DATE** symbol.


## Quick Reference




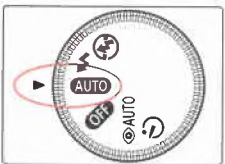
- 1** Load the battery. (→ 13)

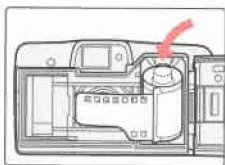


- 2** Load the film. (→ 14)

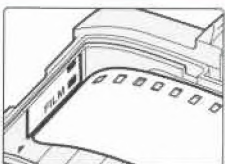

- 3** Pull the film tip across until it reaches the  mark. Then close the back cover. (→ 14)



- 4** Turn the mode dial to **AUTO**. (→ 16)  
➔ The lens cover opens and the lens is set for shooting.

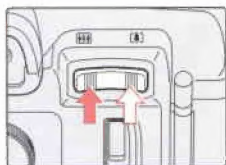


- 5** Use the Wide/ Tele zoom button to select the size of your subject. (→ 18)



AF frame

- 6** Position the AF frame over the subject and take the picture. (→ 19)
- In low-light, the flash fires automatically.

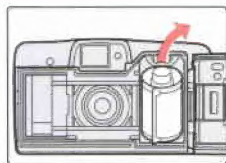

- 7** When you have finished the film and it has rewound, remove the film. (→ 23)


- Check that the frame counter on the LCD panel has returned to "0" and then open the back cover.
- Remove the film and close the back cover.

## Nomenclature




\* AF is an abbreviation for Auto Focus.

### LCD Panel

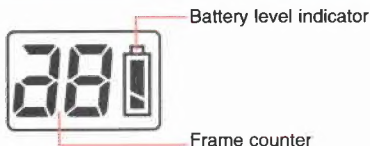


(normally displays only the required information)

For further details, refer to the page indicated.

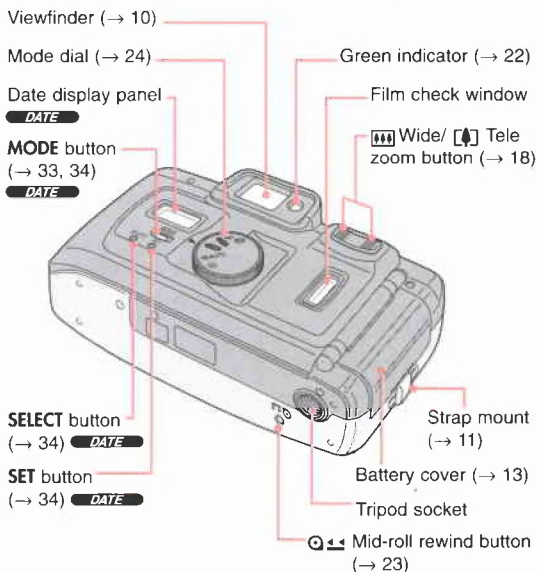



1

**Date display panel** **DATE**

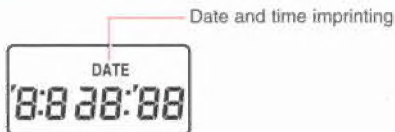


(normally displays only the required information)

## Viewfinder Frames

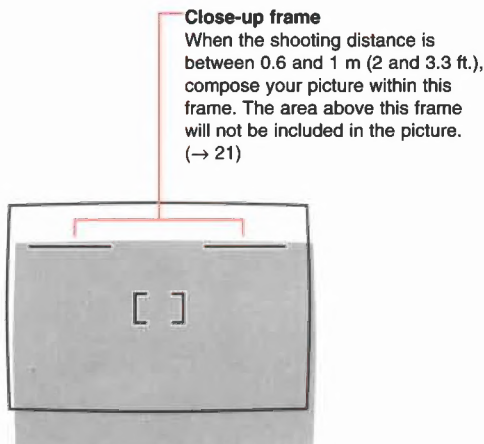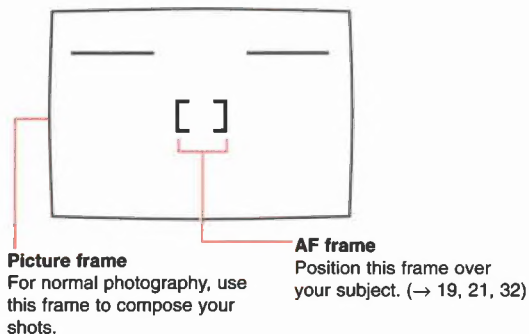



## Attaching and Using the Strap

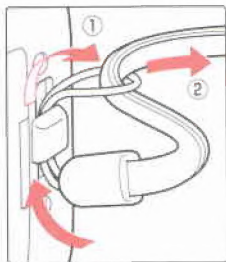
**E**

### Attaching the strap.

- To ensure that you do not drop your camera, attach the strap provided.
- Attach the strap as shown in steps ① and ②.

### About the Projection on the Strap Buckle

Move along  
the strap.

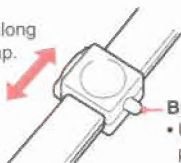

#### Button push projection

- Use the button push projection to push the **SELECT** button (→ 34), the **SET** button (→ 34) and the **Q** button (→ 23).

**1**

## Holding the Camera

To ensure a clear sharp picture, hold the camera firmly so that it does not move when you take a picture.

 


- Hold the camera with both hands and brace your elbows lightly against your body.
- Rest the camera against your forehead, look through the viewfinder and then slowly and gently press the shutter button.



Light-metering  
sensor      Flash

AF emitter  
AF sensor  
Lens




- When you hold the camera, take care to keep your fingers, your hair and the strap away from the lens, AF emitter/sensor, light metering sensor and flash.
- Dust or soiling on the AF emitter/sensor causes focusing difficulties. Wipe soiled areas clean before taking pictures.
- Hold the camera still until you hear the sound of the film winding on, indicating that the camera has finished taking the picture.

## 1 Loading the Battery

E


Applicable Battery: One lithium battery (CR123A)

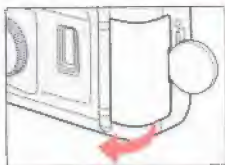


- 1 Open the battery cover.**
- To open, insert a coin into the slot.



- 2 Load the battery.**
- Align the + and - terminals correctly and insert the battery bottom (- end) first.

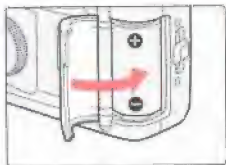


- 3 Replace the battery cover.**

- ➔ The  icon appears on the LCD panel.
- ➔ The date display on the LCD panel changes to " '94 1 1". Set the date and time. (→ 34) **DATE**


1

2


## 2 Loading the Film

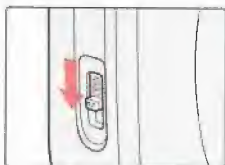


- 1 Open the back cover.**
- Push the lever down.

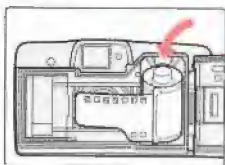


- 2 Load the film.**

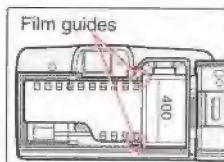

- 3 Position the film correctly between the film guides.**

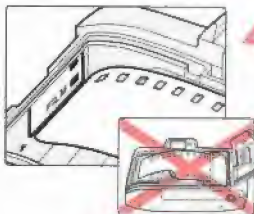

- 4 Pull the film out to the film leader position indicator.**
- Make sure that there is no slack in the film when you pull it out.

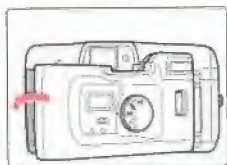


- 5 Close the back cover.**
- The film will automatically advance to the first picture on the roll.



- 6 "1" is displayed in the frame counter.**
- If the frame counter shows a blinking "0", the film did not load correctly. Load the film again.




- Use only film that carries the DX mark. The camera will automatically detect and set the film speed.
- A film speed of ISO 400 is recommended.

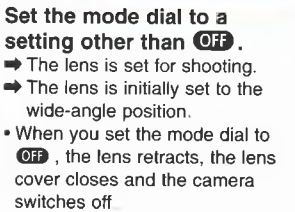


- ➡ The lens is set for shooting.
- ➡ The lens is initially set to the wide-angle position.
- When you set the mode dial to **OFF**, the lens retracts, the lens cover closes and the camera switches off.

 - ➔ The lens is set for shooting.
- ➔ The lens is initially set to the wide-angle position.
- When you set the mode dial to **OFF**, the lens retracts, the lens cover closes and the camera switches off.



## 4 Checking the Battery Power

E

Check that the  icon appears on the LCD panel when you switch the camera on.



(on) The battery is fully charged.



(on) Prepare new battery.



(blinking) Fit the new battery. (→ 13)



**A new battery will generally provide enough charge to shoot approx. 17 rolls of 24-exposure film** (based on Canon's Standard Test Method at normal temperatures and with 50% flash use). At low temperatures ( $-10^{\circ}\text{C}$ ), the battery life is approximately half of the normal figure.



- If you are travelling or plan to take a lot of pictures, take a supply of spare batteries. The correct batteries may be difficult to obtain at your destination.
- When you take consecutive shots using the flash, the battery power may drop off temporarily and prevent the LCD panel from displaying information correctly. If this occurs, switch the camera off and wait a few minutes before switching it back on again.

2

## 5 Using the Zoom

You can use the  Wide/  Tele zoom button to change the size of your subject.




 **Wide-angle**  
(38 mm)



Use this setting for large-scale images such as scenery and group photos.



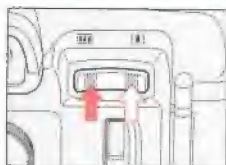

 **Telephoto**  
(76 mm)

Use this setting for shots where you want to zoom in on your subject, such as portraits.



**Press the  Wide/  Tele zoom button.**

- Pressing  zooms in on your subject while pressing  zooms out for a wide-angle shot.



Do not touch the lens while the lens is zooming.



- When you switch the camera on, the lens is initially set to wide-angle (38 mm).
- If the lens is left extended in the telephoto position and is not used for 4 minutes, the lens is automatically retracted to wide-angle position.



## 6 Shooting in Auto Mode

**E**

The shutter button has a two-step action.

The first step sets the focus and exposure, while the second step takes the picture.

In this mode, the AiAF function (→ 20) ensures that the subject stays in focus even when it is not exactly in the center of the viewfinder. The flash also fires automatically in low-light conditions.



AF frame



### 1 Set the focus.

- Position the AF frame over the subject and press the shutter button halfway.
- ➔ The green indicator lights when the subject is in focus.
- Keep the shutter button pressed halfway down.

### 2 Compose the shot and take the picture.

- Press the shutter button down fully.
- Press the shutter button slowly and gently.
- ➔ The photograph is taken.

**2**


## AiAF (Smart AF) Function

Ai = Artificial Intelligence, AF = Auto-focus

The AiAF (Smart AF) function has a wide measuring area and is the latest mechanism for accurate focus adjustment. This mechanism was developed based on the analysis of several thousand photographs and on Canon's unique expertise.



- The camera focuses on the subject even if it is not in the center of the viewfinder, or if there is an obstruction in front of it. The camera will also focus accurately on two subjects positioned side by side, and not on the background between them.

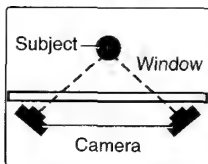


- If you are taking a picture through a window, set the camera at an appropriate angle, with a camera-to-window distance of about 20 cm/0.7 ft.

*If you are too far away from the window, the camera may focus on the glass of the window rather than the subject.*

## Close-up Photography

In close-up photography (at distances of 60 cm to 1 m), the area visible through the viewfinder does not exactly match the area actually included in the shot. The area above the close-up frame markings is not included in the photograph. For this sort of shot, use the AF frame and the close-up frame as described below.


Close-up frame

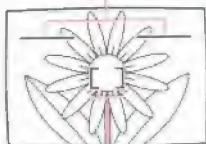

AF frame

### 1 Set the focus.

- Position the AF frame over the subject and press the shutter button down halfway.
- ➔ The green indicator lights when the subject is in focus.
- Keep the shutter button pressed halfway down.

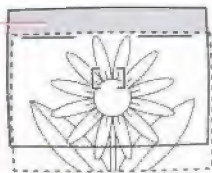

Area actually photographed  
(inside dotted line)

### 2 Compose the shot and take the picture.

- Compose the shot so that the subject is below the close-up frame and take the picture
- Do not change the distance from the camera to the subject

Area visible in the viewfinder that is not photographed



### Green Indicator


- When you press the shutter button down halfway, the indicator lights or blinks to show whether the camera is ready to shoot.



### Green Indicator

Lit: Camera ready to shoot (subject in focus).

Slow blinking (4 times/sec.): Proximity warning

Fast blinking (16 times/sec.): Camera shake warning  
(in  mode)

- When the proximity warning appears, move away from the subject until the indicator stops blinking and press the shutter button again.
- When the camera shake warning appears, use a tripod or other camera mount.

## 7 Removing the Film

E

The film rewinds automatically when it reaches the end. The frame counter counts down as the film rewinds and the frame counter shows "0" when the film is fully rewound.




- 1 Check that the frame counter shows "0".




- 2 Open the back cover.
- Push the lever down and remove the film.

### To remove the film before you reach the end



- Press the  button on the bottom of the camera.
- Hold the button down until the film starts to rewind.



- Always check that the frame counter on the LCD panel has returned to "0" before you open the back cover. If the counter is not at "0", use the button push projection on the camera strap (→ 11) to push the  button.
- If you shoot more than the stipulated number of exposures on a roll of film, the final shot may be lost during developing and processing, or the date and time may not be imprinted on the final shot.


2

## Changing the Shooting Mode

You can cause the flash to fire for every shot or suppress flash operation completely to suit the subject or location.



**Turn the mode dial to select the mode.**

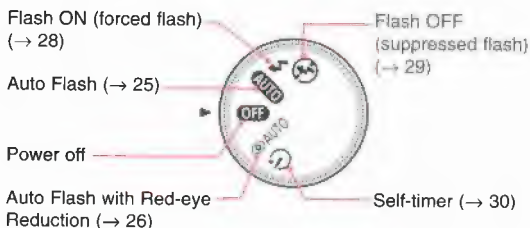

**AUTO Auto Flash (No Red-eye Reduction)**

Use this mode to take pictures of subjects other than people, or to photograph people without using the red-eye reduction function.

In low-light conditions, the flash fires automatically without the red-eye reduction function.



Turn the mode dial to **AUTO**.


**Flash Distance Range (using color negative film)**


Film speed	38 mm (Wide-angle)	76 mm (Telephoto)
ISO 100	0.6 to 4.6 m (2 to 15.2 ft)	0.6 to 2.5 m (2 to 8.2 ft)
ISO 400	0.6 to 9.2 m (2 to 30.4 ft)	0.6 to 5 m (2 to 16.4 ft)

## **AUTO** Auto Flash with Red-eye Reduction


Use this mode to reduce the red-eye effect (→ 27) when you are taking pictures of people in low-light conditions. When you press the shutter button, the red-eye reduction lamp lights and then the flash fires.




- 1** Turn the mode dial to  **AUTO**.

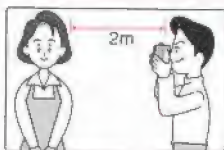

- 2** Move to within 2 m (6.6 ft.) of your subject.
- The red-eye reduction lamp is only effective within this distance.

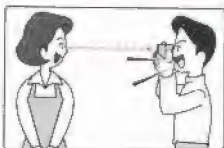

- 3** Get your subject to look at the camera.
- The red-eye reduction function is only effective if the subject is looking directly at the camera.

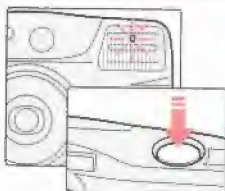


- 4** Take the picture.
- Slowly press the shutter button down fully.
  - ➔ Shutter release is delayed for about a second while the red-eye reduction lamp lights.
  - Keep the shutter button pressed down until you hear the film advance to the next frame.



## Red-eye Reduction Function

When you use the flash to take photos of people in low-light conditions, their eyes sometimes glow red in the photograph. This is referred to as the red-eye effect and is caused by the light of the flash reflecting off the retina of the eye.

In  AUTO mode, the red-eye reduction lamp lights for approximately 1 second before the flash fires. This causes the subject's pupils to contract and thereby minimizes the risk of red-eye. Note that the effectiveness of red-eye reduction varies from person to person.



When the red-eye reduction lamp lights, shutter operation is delayed for approximately 1 second to heighten the effectiveness of the lamp. To make the shutter operate instantly, take the picture with the mode dial set to **AUTO**.


3



The effectiveness of red-eye reduction can be enhanced by making the room as bright as possible and by using a wide-angle lens setting.

## **Flash ON (Forced Flash) Mode**


In this mode, the flash fires regardless of the light conditions when the picture is taken. Use this setting for fill-in flash in daylight or to soften the outline of your subject.

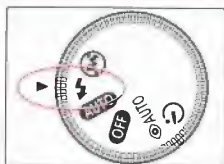

Turn the mode dial to .


## **Flash OFF (Suppressed Flash) Mode**

In this mode, the flash does not fire regardless of how dark conditions are when the picture is taken. Use this mode for sunset shots, for places where flash use is prohibited, or for available-light photography.

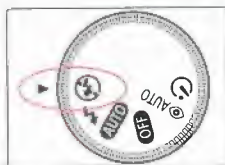

Turn the mode dial to .




- Because a slow shutter speed is used (up to 1.5 seconds) when the flash is set to  mode in low-light conditions, take care to avoid camera shake.
- If the green indicator is blinking rapidly (camera shake warning), set the camera on a steady surface or use a tripod.



## Using the Self-timer

The self-timer function allows you to take a picture when you are some distance from the camera.

In bright conditions, the self-timer operates in the auto flash with red-eye reduction. In low-light conditions it automatically operates with the slow-synchro function. (→ 31)

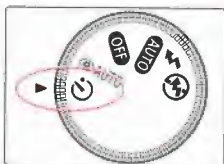

**1** Turn the mode dial to .



**2** Compose the picture and press the shutter button.

- ➔ The red-eye reduction lamp blinks (once a second) and a 10-second countdown is displayed on the LCD panel.
- ➔ The shutter is released after about 10 seconds.
- To cancel the self-timer, turn the mode dial to another mode.



Do not stand directly in front of the camera when you press the shutter button as this will result in the picture being out of focus.



- Approximately 2 seconds before the shutter is released, the lamp begins to blink more rapidly. If the flash and the red-eye reduction function are used, the lamp stays lit for the last 2 seconds.
- Set the camera on a steady surface or use a tripod.

## Slow-Synchro Function

The slow-synchro function is effective when taking pictures of people in evening or night views when the background is dark. The slower shutter speed allows distant backgrounds not illuminated by the flash to be included in the photograph.

The self-timer operates automatically with the slow-synchro function in low-light conditions.



Because a slow shutter speed (up to 1/4 seconds) is used in this mode, always use a tripod to prevent camera shake. Take care also to ensure that the subject does not move immediately after the flash fires.


3



The red-eye reduction function (→ 27) operates in slow-synchro mode.


## Using Focus Lock

Lock the focus when you want the subject of your shot to be off to one side of the frame.

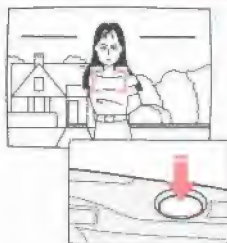

### 1 Set the focus.

- Position the AF frame over the subject and press the shutter button halfway.
- ➔ The green indicator lights, when the subject is in focus.
- Keep the shutter button pressed halfway down.

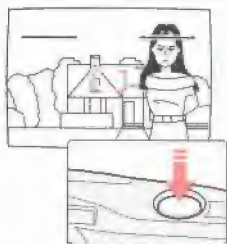

### 2 Compose the shot and take the picture.

- Compose your shot.
- Press the shutter button down fully.
- Press the button down slowly and gently.
- ➔ The photograph is taken.




Take care that the distance from the camera to the subject does not change. If the distance does change, lock the focus again.

## Imprinting the Date and Time DATE

E

You can imprint the date and time the picture was taken in the lower right corner of the photograph.

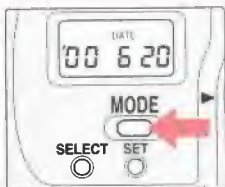


### Select the date/time combination.

- The date/time combination changes each time you press the **MODE** button.
- Take the picture with the desired date/time combination selected



Date/time imprinted here.

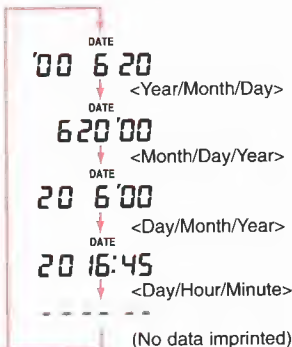


The "00" in the year display indicates the last two digits in the year 2000.

## Setting the Date and Time **DATE**


When you replace the battery or travel abroad, use the procedure below to set or adjust the date and time settings.

- Always use the button push projection on the strap buckle to push the **SELECT** and **SET** buttons. (→ 11)


### Setting the Date

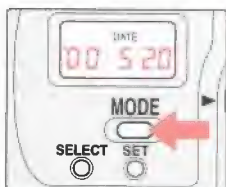

- 1 Display the date only.**
- Press the **MODE** button to display the date only.
  - Refer to the next page to set the time.

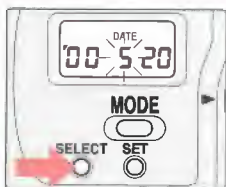


- 2 Select the date setting.**
- Press the **SELECT** button to select the setting.
  - ➔ The selected setting (blinking numbers) changes sequentially from year to month to day.

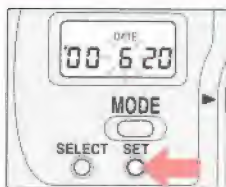

- 3 Set the date.**
- Press the **SET** button to set the date.
  - Repeat steps 2 and 3 to set all the date settings.
  - If you press the **SELECT** button and none of the date settings blink, date setting is complete.




## Setting the Time

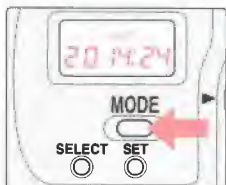


### 4 Display the date and time.

- Press the **MODE** button to display the date and time.
- Refer to the previous page to set the date.

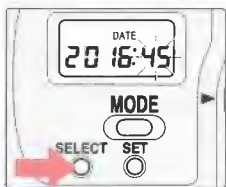

### 5 Select the time setting.

- Press the **SELECT** button to select the setting.
- ➔ The selected setting (blinking numbers) changes sequentially from hour to minute.

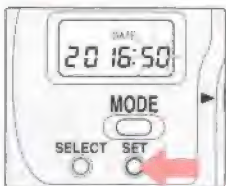

### 6 Set the time.




- Press the **SET** button to set the time.
- Repeat steps 5 and 6 to set all the time settings.
- If you press the **SELECT** button and none of the time settings blink, time setting is complete.



- If you replace the battery, the date display on the LCD panel changes to "94 1 1". When this occurs, reset the date and time.
- Each time the **SET** button is pressed, the number increases by one. If kept pressed, the number increases quickly.

## Troubleshooting

In case of problems, check the table below before taking your camera to be repaired.

Problem	Cause	Remedy	Page
The  icon blinks on the LCD panel.	<ul style="list-style-type: none"> <li>• The battery has run out of charge.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the battery.</li> </ul>	13
The  icon is not displayed on the LCD panel.	<ul style="list-style-type: none"> <li>• No battery is loaded</li> </ul>	<ul style="list-style-type: none"> <li>• Install the battery</li> </ul>	13
	<ul style="list-style-type: none"> <li>• The battery is installed with the wrong polarities</li> </ul>	<ul style="list-style-type: none"> <li>• Reinsert the battery correctly.</li> </ul>	13
	<ul style="list-style-type: none"> <li>• The battery has completely run out of charge</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the battery</li> </ul>	13
The shutter does not release.	<ul style="list-style-type: none"> <li>• The mode dial is set to <b>OFF</b></li> </ul>	<ul style="list-style-type: none"> <li>• Set the mode dial to the appropriate setting</li> </ul>	24
	<ul style="list-style-type: none"> <li>• The battery has run out of charge.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the battery.</li> </ul>	13
	<ul style="list-style-type: none"> <li>• The film is not loaded correctly.</li> </ul>	<ul style="list-style-type: none"> <li>• Load a new film</li> </ul>	14
	<ul style="list-style-type: none"> <li>• A rewind (used) film has been loaded.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the film and load a new one.</li> </ul>	23
	<ul style="list-style-type: none"> <li>• The shutter releases only after the red-eye reduction lamp is lit for about 1 second.</li> </ul>	<ul style="list-style-type: none"> <li>• Hold the shutter button down until the shutter releases</li> </ul>	27
		<ul style="list-style-type: none"> <li>• Change the flash mode to <b>AUTO</b></li> </ul>	25
The photographs are blurred	<ul style="list-style-type: none"> <li>• When the shutter was released, the AF emitter/sensor were blocked.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure that the AF emitter/sensor are not blocked by hair, fingers, etc.</li> </ul>	12
	<ul style="list-style-type: none"> <li>• In  mode, you were standing directly in front of the camera when you pressed the shutter button.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure you do not stand immediately in front of the camera when pressing the shutter button.</li> </ul>	30
	<ul style="list-style-type: none"> <li>• The camera moved when the shutter button was pressed (camera shake).</li> </ul>	<ul style="list-style-type: none"> <li>• Press the shutter button slowly and gently.</li> </ul>	19
	<ul style="list-style-type: none"> <li>• The AF emitter/sensor or lens is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>• Wipe them clean.</li> </ul>	12

Problem	Cause	Remedy	Page
"H" is displayed on the LCD panel.	• The self-diagnosis function detected an error.	• Remove the battery from the camera. When the "H" disappears from the LCD display, load the battery again.	13

## Questions and Answers

### **Q1 Can slide (reversal) film be used?**

**A1** Yes. However, 35 mm film with the DX marking and a film speed of ISO 25, 50, 100, 200, 400, 800 or 1600 should be used.

### **Q2 What is the film speed (ISO number)?**

**A2** The ISO number indicates the film's sensitivity to light in numerical terms. The higher the number, the more sensitive the film is to light. Film with an ISO number of 400 should be used for normal photography.

### **Q3 Can film that does not have the DX marking be used?**

**A3** Yes, it can. However, when film with no DX code is loaded, the film speed is set to ISO 25. After loading film with no DX marking or a speed of ISO 25 into the camera, close the back cover and press the shutter button once or twice.

### **DATE**

### **Q4 The date imprinted on my photos is difficult to see.**

**A4** Perhaps the background where the date is imprinted is very bright. Try to ensure that there is a dark object where the date will appear. Similarly, avoid having yellowish or white objects where the date will be imprinted.

## Specifications

**Type:** Fully-automatic 35 mm lens-shutter AF camera with built-in zoom lens

**Image Size:** 24 × 36 mm

**Lens:** Canon 38–76 mm f/4.2–7.8 lens

**Focusing:** Active AiAF

**Focal Distance:** 0.6 m/2.0 ft. to ∞

**Shutter:** Combination aperture and program electromagnetically driven shutter

**Viewfinder:** Real-image zoom viewfinder

**Viewfinder Information:** Picture frame, AF frame, Close-up frame

**Viewfinder Eyepiece:**

Green indicator: Combination camera ready indicator, proximity warning, flash charging complete indicator and camera shake warning

**Film Loading:** Automatic

**Film Advance:** Automatic with mid-roll rewind possible

**Frame Counter:** Counts up during film advance and counts down during film rewinding

**Self-timer:** 10 sec. delayed shutter release timer with operation displayed on the LCD panel

**Exposure Control Range:**

AUTO and Flash ON modes:

Wide-angle: 1/500 sec. at f/16 to 1/38 sec. at f/4.2

Telephoto: 1/500 sec. at f/30 to 1/76 sec. at f/7.8

Flash OFF mode:

Wide-angle: 1/500 sec. at f/16 to 1.5 sec. at f/4.2

Telephoto: 1/500 sec. at f/30 to 1.5 sec. at f/7.8

Self-timer (AUTO) mode:

Wide-angle: 1/500 sec. at f/16 to 1/38 sec. at f/4.2

Telephoto: 1/500 sec. at f/30 to 1/76 sec. at f/7.8

Self-timer (Slow-synchro) mode:

Wide-angle: 1/4 sec. at f/4.2

Telephoto: 1/4 sec. at f/7.8

**Film Speeds:** ISO 25–3200, set automatically in 1-step increments using DX codes

**Built-in Flash:** Internal flash fires automatically in low-light conditions

[ISO 100] Wide-angle: 0.6 to 4.6 m/2 to 15.2 ft.  
Telephoto: 0.6 to 2.5 m/2 to 8.2 ft.

[ISO 400] Wide-angle: 0.6 to 9.2 m/2 to 30.4 ft.  
Telephoto: 0.6 to 5.0 m/2 to 16.4 ft.  
(using color negative film)

**Flash Recycling Time:** Approx. 5 seconds (with new battery)

**Shooting Mode Selection:** Using mode dial (→ 24)

Auto Flash: Flash fires automatically in low-light conditions

Auto Flash with Red-eye Reduction: Flash fires automatically  
in low-light conditions

Flash ON: Forced flash

Flash OFF: Suppressed flash

**Power Supply:** One CR123A 3V lithium battery

**Number of Shots:** Approx. 17 rolls of 24-exposure film (normal temperature with 50% flash use)

**Dimensions (W × H × D):** 121 × 68 × 45 mm/  
4.8 × 2.7 × 1.8 in.

**Weight:** Models without date: 225 g/7.9 oz. (excluding battery)  
Models with date: 230 g/8.1 oz. (excluding battery)

#### **DATE**

**Automatic Date:** Automatic built-in calendar (programmed up to 2029 with automatic correction for leap years)

**Imprinted Data:** Date in 5 formats (including no imprinting)

**Character Types:** 6 × 7 dot matrix

**Imprinting Color:** Orange

- All data are based on Canon's Standard Test Method.
- Subject to change without notice

**F** Français

**Flash incorporado:** O flash interno dispara automaticamente em condições de pouca luz

[100 ISO] Grande-angular: 0,6 a 4,6 m; Telefoto: 0,6 a 2,5 m

[400 ISO] Grande-angular: 0,6 a 9,2 m; Telefone: 0,6 a 5,0 m (usando película negativa a cores)

**Tempo de recarga do flash:** Aprox. 5 segundos (com pilha nova)

**Seleção do modo de fotografia:** Com o disco de modo (→ 24)

Flash automático: O flash dispara automaticamente em condições de pouca luz

Flash automático com redução de olhos vermelhos:

O flash dispara automaticamente em condições de pouca luz

Flash activado: flash forçado

Flash desactivado: flash suprimido

**Fornecimento de energia:** Uma pilha de lítio CR123A, 3V

**Número de disparos:** Aprox. 17 películas de 24 exposições (Temperatura normal com 50% de uso do flash)

**Dimensões (C × A × P):** 121 × 68 × 45 mm

**Peso:** Modelo sem data: 225 g (sem pilha)

Modelo com data: 230 g (sem pilha)

## DATE

**Datador automático:** Calendário automático incorporado (programado até 2029 com correcção automática de anos bissextos)

**Dados impressos:** Data em 5 formatos (incluindo a não impressão)

**Tipos de caracteres:** Matriz de 6 × 7 pontos

**Cor de impressão:** Laranja

- Todos os dados são baseados no Método de Teste Padrão da Canon.
- As especificações e o desenho do produto estão sujeitos a modificações sem aviso prévio.

# Canon

**CANON INC.** 30-2, Shimomarucho 3-chome, Ohta-ku, Tokyo 146-8501, Japan

**U.S.A. ——— CANON U.S.A. INC.**

For all inquiries concerning this camera, call toll free in the U.S.  
1-800-828-4040 or write to: Customer Relations, Canon U.S.A., Inc.  
One Canon Plaza, Lake Success, N.Y. 11042-1198

**CANADA ——— CANON CANADA INC. HEADQUARTERS**

6390 Dixie Road, Mississauga, Ontario L5T 1P7, Canada

**CANON CANADA INC. MONTREAL BRANCH**

5990, Côte-de-Liesse, Montréal Québec H4T 1V7, Canada

**CANON CANADA INC. CALGARY OFFICE**

2828, 16th Street, N.E. Calgary, Alberta T2E 7K7, Canada

For all inquiries concerning this camera, call toll free in Canada  
1-800-828-4040

**EUROPE, ——— CANON EUROPA N.V.**

**AFRICA & MIDDLE EAST** Bovenkerkerweg 59-61, P.O. Box 2262, 1180 EG Amstelveen,  
The Netherlands

**CANON PHOTO VIDEO FRANCE S.A.**

102, avenue du General de Gaulle 92250 La Garenne Colombes, France

**CANON UK LTD.**

Woodhatch Reigate Surrey RH2 8BF, United Kingdom

**CANON EURO-PHOTO G. m. b. H.**

Siemensring 90-92, D-47877 Willich, Germany

**CANON ITALIA S.p.A.**

Palazzo L, Strada 6, 20089 Rozzano, Milanofiori, Milano, Italy

**CANON Benelux N.V./S.A.**

Bessenveldstraat 7, 1831 Diegem (Machelen), Belgium

**CANON Schweiz AG**

Geschäftsbereich Wiederverkauf, Industriestrasse 12, CH-8305 Dietlikon,  
Switzerland

**CANON G. m. b. H.**

Oberlaaerstrasse 233, 4th floor, 1100 Wien, Austria

**CANON España, S. A.**

C/Joaquín Costa, 41, 28002 Madrid, Spain

**SEQUE Soc. Nac. de Equip., Lda.,**

Praça da Alegria, 58, 2°, 1250 Lisboa, Portugal

**CENTRAL & ——— CANON LATIN AMERICA, INC. DEPTO DE VENTAS .**

**SOUTH AMERICA** 6505 Blue Lagoon Drive, Suite 325, Miami, FL33126 U.S.A.

**CANON LATIN AMERICA, INC. CENTRO DE SERVICIO Y  
REPARACION**

Apartado 2019, Zona Libre de Colón, República de Panamá

**ASIA ——— CANON HONGKONG CO., LTD.**

9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong

**OCEANIA ——— CANON AUSTRALIA PTY. LTD.**

1 Thomas Holt Drive, North Ryde, N.S.W. 2113, Australia

**CANON NEW ZEALAND LTD.**

Fred Thomas Drive, P.O. Box 33-336, Takapuna, Auckland, New Zealand

**JAPAN ——— CANON SALES CO., INC.**

12-15 Mita, 3-Chome, Minato-ku, Tokyo 108-8011, Japan